


Tech Note 130624.1: Change to ALFA sampling bottle caps

Two amber bottles with quick disconnect caps are provided for sampling ease.

- Note that each bottle has a tube that reaches near the bottom of the bottle that the sample is taken from and a tube that is shorter, which sample may be returned to the bottle through. Re-circulation of samples is not recommended and typically only done to make an analysis of ALFA (such as in an estimation of clean water).

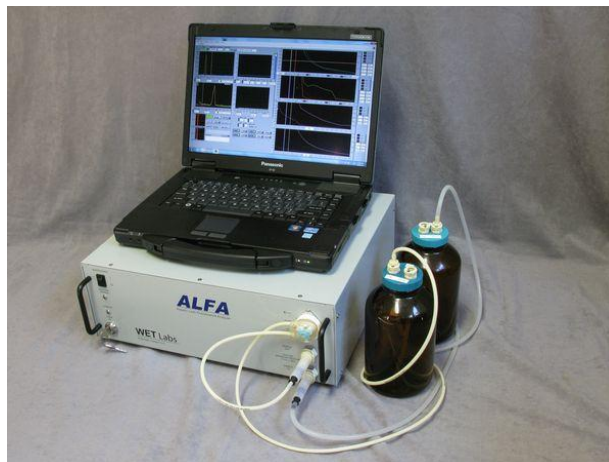

These bottle caps are no longer recommended by WET Labs.

- The bottles are designed for recirculation of samples which is not recommended.
- The tubing may kink more easily.
- WET Labs cannot support supply or modification of caps.



Use aluminum foil to cover the bottles and hold the tubing in position.

