


DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.
9.21.04	A	fixed CHL range & pin-out	CB	KLP	
10.31.06	B	ECN 01018, ADDED TRB RANGE	CB	KH	
7/27/09	C	ECN 1247: CHANGED CABLE TYPE	CB	PC	

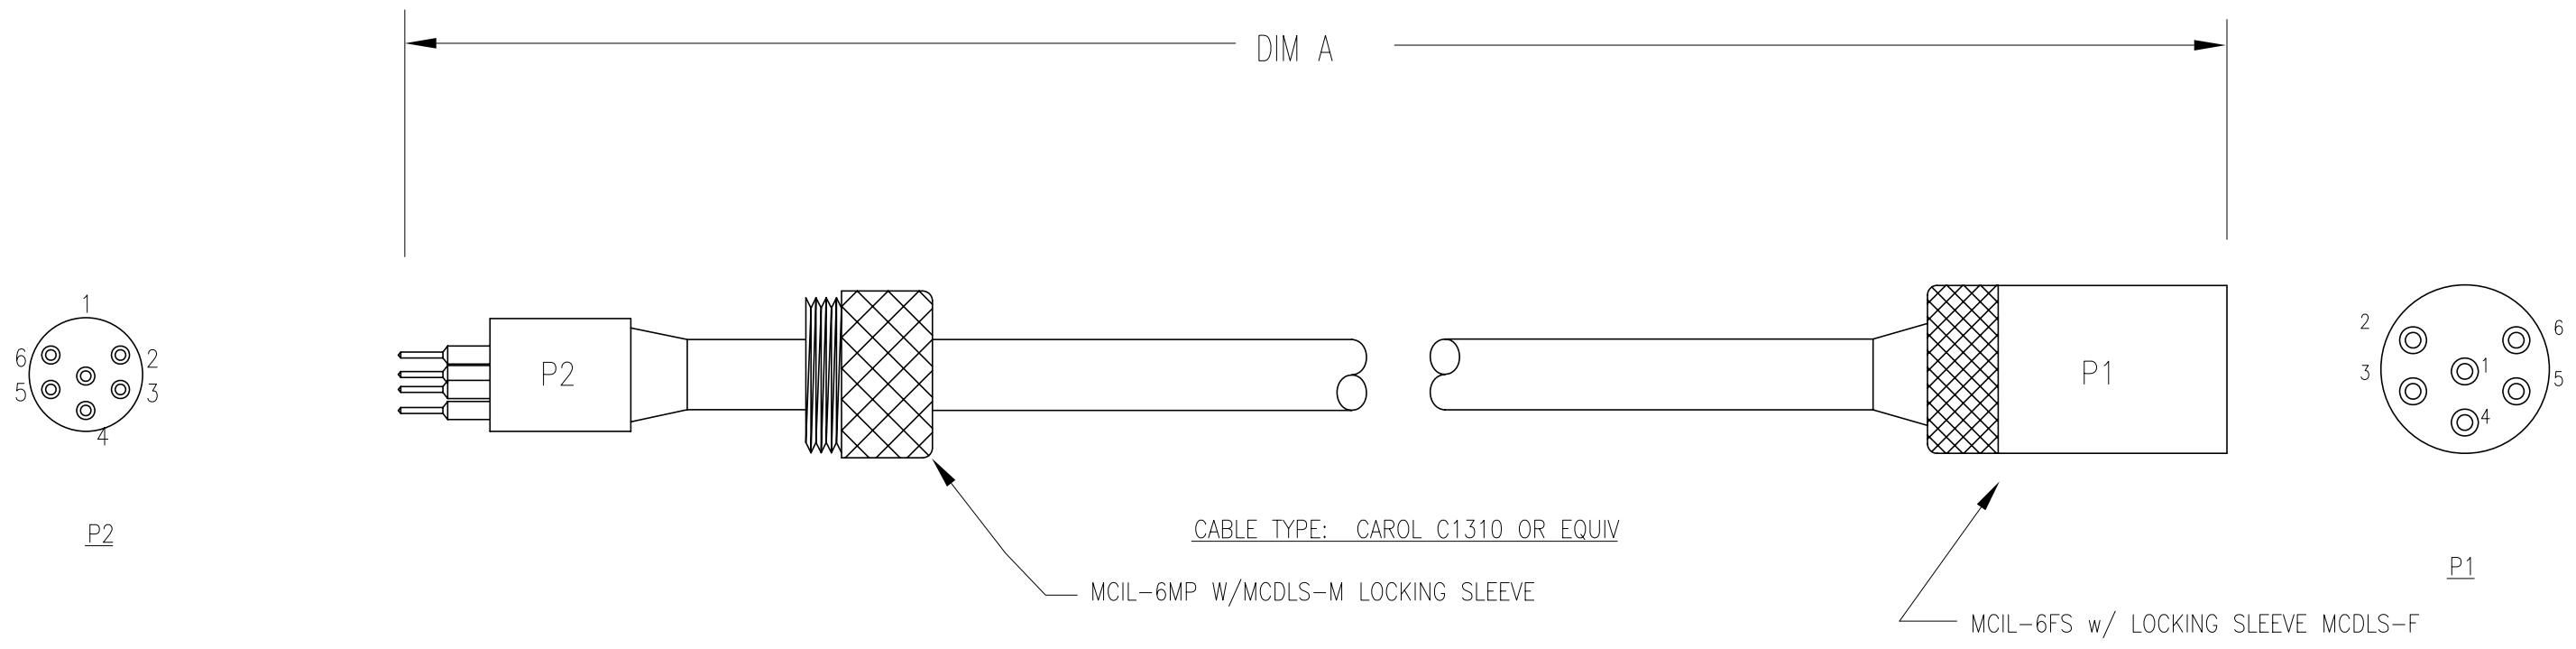

SBE PN	DIM A
171920	8 IN

P1 MCIL-6FS	P2 MCIL-6MP	SIGNAL
PIN 1	PIN 1	POWER
PIN 2	PIN 2	POWER GROUND
PIN 3	PIN 3	ANALOG SIGNAL
PIN 4	PIN 4	ANALOG GROUND
PIN 5	PIN 4	10X GAIN CONTROL
PIN 6	---	---

GAIN	CHL RANGE	RWT RANGE	TRB RANGE
10X	0-50 µg/L	0-100 ppb	0-1000 NTU

SEA-BIRD ELECTRONICS, INC

P/N	SCALE	DRAWN BY	
SEE TABLE	NTS	KLP	
		APPROVED BY	
CABLE: MCIL-6MP TO MCIL-6FS CYCLOPS-7 (X10) JUMPER			
DATE	DWG NO.	SHEET	REV
10.31.06	32922	1 of 1	C